



Diesel Generator Deep Sea Control Panel

How to turn the generator **OFF** and NON operational -
(How to isolate generator)

To place into **manual mode**

Press the hand button () on the control panel

Then **press** the red stop button () on the control panel

The display will say genset at rest' in manual mode

And then go round to the mains MCCB on the other side of generator
and turn the mains MCCB..... **OFF**

This will prevent the generator from starting.

Generator will not start in this mode

To place in back into **auto standby** operation mode

Turn **ON** main MCCB on the Generator

Then **press** the hand button on the control panel

Then **press** the auto button on the control panel

The display will show generator at rest' in auto standby operation
mode

**The generator is now back once more in auto standby mode
and will start in the event of power loss**