 





 




User Instructions

<p>Generator Controller</p> <p>Generator control panel</p> <p>Main stop button </p>	
<p>Generator Controller</p> <p>Generator control panel</p> <p>Manual mode button - in manual mode when Lit</p> 	
<p>Generator Controller</p> <p>Generator control panel</p> <p>Auto button </p> <p>This button red light must always lit to ensure the generator remains in automatic mode ready to take load during any power outage.</p>	
<p>Generator Controller</p> <p>Generator control panel</p> <p>alarm mute button- should you require to mute any alarm signal </p> <p>Take a note of any alarm message first</p>	
<p>Generator Controller</p> <p>Generator control panel</p> <p>Main info display button </p> <p>Use this to scroll on the display screen if required</p>	