

MONTHLY ON LOAD TEST

Using Control Panel In Plant Room

Generator – at all times the generator is in Auto

Generator control panel **Auto** button 

This button **red light** must **always lit** to ensure the generator remains in automatic mode ready to take load during any power outage.



Monthly ON Load Test will place all the building load on the generator.

This test is using the control panel - main distribution board in plant room.

To begin monthly **ON** load test

Press manual button **ONCE** 

Red light will be **lit**.


You are now in manual mode.



Press the green **MODE** button

repeatedly until "**Test on Load** " is shown on the display.



Press the tick button **ONCE** to confirm the change. 

A LED indicator beside the button confirms this action.




The Generator Will Now Start – Leave generator to run for 15 minutes

To **STOP** ON Load test

press the **Red** Stop button 



Press the **Auto** button  to bring the generator back into automatic mode.



Generator – at all times the generator is in Auto

Generator control panel **Auto** button 

This button **red light** must **always lit** to ensure the generator is in automatic mode ready to take load during any power outage.

